

Approvals & Disclaimer



The information contained herein is offered in good faith and is believed to be accurate. However, because conditions and methods of use of our products are beyond our control, this information should not be used in substitution for customer's tests to ensure that Chroma-Q products are safe, effective, and fully satisfactory for the intended end use. Suggestions of use shall not be taken as inducements to infringe any patent. Chroma-Q sole warranty is that the product will meet the Chroma-Q sales specifications in effect at the time of shipment. Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted.

Chroma-Q reserves the right to change or make alteration to devices and their functionality without notice due to on-going research and development.

The Chroma-Q Color Block PSU-05B has been designed specifically for the professional entertainment lighting industry. Regular maintenance should be performed to ensure that the products perform well in the entertainment environment.

If you experience any difficulties with any Chroma-Q products please contact your selling dealer. If your selling dealer is unable to help please contact support@chroma-q.com. If the selling dealer is unable to satisfy your servicing needs, please contact the following for full factory service:

Outside North America:

Tel: +44 (0)1494 446000

Fax: +44 (0)1494 461024

support@chroma-q.com

North America:

Tel: +1 416-255-9494

Fax: +1 416-255-3514

support@chroma-q.com

For further information please visit the Chroma-Q website at www.chroma-q.com.

Chroma-Q is a trademark, for more information on this visit www.chroma-q.com/trademarks.

The rights and ownership of all trademarks are recognised.

Quick Start Guide Color Block™ PSU-05B



For a full product manual please visit www.chroma-q.com

1. Overview

The Color Block PSU-05B supplies power and data to a maximum of 5 Color Block DB4 or Color Block 2 LED fixtures through a XLR4 output. It can be controlled in 16 modes via ANSI E1.11 USITT DMX 512-A, or can operate independently as a standalone system.

For the purpose of clarification, the Color Block DB4 is a fixture that contains 4 Cells, with each Cell comprising of 3 LEDs; the Color Block 2 is a fixture that contains 48 high output LED set into 12 single-optic RGBA clusters that are grouped into 4 cells.

Note: To ensure proper functionality, Date/Time must be set before operation. Look Store will function when Date/Time are set. Time is reset when battery is replaced or when the PSU-05B is reset.

2. Safety

The PSU-05B must be hung with a safety cable.

3. Cabling

1. Connect power through a fused male IEC connector with input of 100-240V, 50-60 Hz. The standard fuse is a 5x20mm 3A GMA.
2. Connect input data ANSI E1.11 USITT DMX 512-A from an external source or lighting control console through a male XLR-5. A pass through connection is available on the female XLR-5.
3. Connect power and output data through a single female XLR-4 to the Color Block DB4 or Color Block 2 fixtures. A maximum of five daisy-chained Color Block fixtures can be connected to the XLR4 output. Return lines are not required but the total length of each chain must not exceed 60m/~200ft.

Note: See diagram in full User Manual available at www.chroma-q.com.

4. Control Menu

The Color Block PSU-05B menu items are accessed via the LCD display with the following controls:

- Right hand button (red) = Enter (hold for 2 seconds to save)
- Left hand button (blue) = Exit without saving
- Wheel = Adjusts values or scrolls through menu items

Menu Options Function

DMX Address To set DMX start address, press Enter, turn wheel to adjust DMX start address, press Enter for 2 seconds to save.

Control Mode There are 10 DMX controlled modes for the Color Block DB4 system (CB1) and 16 DMX controlled modes for the Color Block 2 system (CB2). Go to "System" and select either "CB1" or "CB2". There are 3 grouping options (Cell, Block, All) with 3 control options for each (FX, HSI and RGB):

Mode	Ch	Group	System: CB1	System: CB2
1	67	Variable	7FX + 20xHSI	7FX + 20xHSI
2	60	Cell	20xHSI	20xHSI
3	60	Cell	20xRGB(w/ *Magic Amber)	20xRGB(w/ *Magic Amber)
4	21	Block	6FX + 5xHSI	6FX + 5xHSI
5	15	Block	5xHSI	5xHSI
6	15	Block	5xRGB(with *Magic Amber)	5xRGB(w/ *Magic Amber)
7	9	All	6FX + HSI	6FX + HSI
8	3	All	HSI	HSI
9	3	All	RGB (w/ *Magic Amber)	RGB (w/ *Magic Amber)
10	80	Cell	Not Available	20xRGBA
11	80	Cell	Not Available	20xRGBI (w/ *Magic Amber)
12	20	Block	Not Available	5xRGBA
13	20	Block	Not Available	5xRGBI (with *Magic Amber)
14	4	All	Not Available	RGBA
15	4	All	Not Available	RGBI (w/ *Magic Amber)
16	1	Any	Look Select	Look Select

When DMX is Lost If DMX is not detected press Enter, turn wheel to selection, press Enter for 2 seconds to save. **Off** – will snap to off; **Hold** – will hold last valid DMX state; **Trig** – will default to Time Trigger operation; Look 1-42 – will snap to the Look of your choice.

Look Store There are 31 internal FX Looks (1-9 are preset). To replay a Look, press Enter and scroll through the Looks. 2 ways to record or edit a Look:

- Simple, with DMX console: set to Mode 1. Use DMX console to adjust the internal FX engine. Scroll to Look Store - press Enter, scroll to desired Look location and press Enter for 2 seconds to save.
- Advanced, standalone: (To edit or record without a DMX console, please see the full User Manual available at www.ac-et.com)

Time Triggers Press Enter and scroll to Time Trigger – press Enter. Press Enter to toggle between Day, Hour (24), Minutes and Look to be triggered - adjust setting with scroll wheel. Time Triggers will occur on all 7 days unless specified. The triggers will be activated when the mode "When DMX is Lost" is set to Trig.

Set Day and Time Press Enter. Press Enter to toggle between Day, Hour (24) and Minutes, adjusting the settings with scroll wheel and press Enter for 2 seconds to save.

Displ Backlight To set LCD backlight to go off after 5 seconds, press Enter and scroll wheel to On (permanently) or Off (after 5 seconds) and press Enter for 2 seconds to save setting.

Reset to Default Press Enter for 2 seconds to reset all menu items to factory defaults: DMX address = 001, Control Mode = 1 (67 channels HSI+FX), DMX Lost = Hold, Looks = default, Display = On, Frequency = 360, System = CB2

System To set PSU-05B for the Color Block DB4 (CB1) or the Color Block 2 (CB2) system press Enter, scroll wheel to select CB1 or CB2, press Enter for 2 seconds to save.

Frequency 360, 600, 1200 and 2400 frequency settings available for the LED scan rate to be synchronised with the video camera. Press Enter, scroll wheel to select frequency, press Enter for 2 seconds to save.

Sync Mode Press Enter and use the scroll wheel to select Master or Slave. Press Enter for 2 seconds to save.

	Variable	Cell			Block			All			Cell		Block		All	
Mode	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
Ch1	Group	H-1	R-1	Speed	H-1	R-1	Speed	H-1	R-1	R-1	R-1	R-1	R-1	R-1	R-1	
Ch2	Speed	S-1	G-1	Fan	S-1	G-1	Fan	S-1	G-1	G-1	G-1	G-1	G-1	G-1	G-1	
Ch3	Fan	I-1	B-1	Range	I-1	B-1	Range	I-1	B-1	B-1	B-1	B-1	B-1	B-1	B-1	
Ch4	Range	H-2	R-2	Step	H-2	R-2	Step			A-1	I-1	A-1	I-1	A-1	I-1	
Ch5	Step	S-2	G-2	Int. FX	S-2	G-2	Int. FX			R-2	R-2	R-2	R-2			
Ch6	Int. FX	I-2	B-2	Int.Fan	I-2	B-2	Int.Fan			G-2	G-2	G-2	G-2			
Ch7	Int.Fan	H-3	R-3	H-1	H-3	R-3	H-1			B-2	B-2	B-2	B-2			
Ch8	H-1	S-3	G-3	S-1	S-3	G-3	S-1			A-2	I-2	A-2	I-2			
Ch9	S-1	I-3	B-3	I-1	I-3	B-3	I-1			R-3	R-3	R-3	R-3			
Ch10	I-1	H-4	R-4	H-2	H-4	R-4				G-3	G-3	G-3	G-3			
Ch11	H-2	S-4	G-4	S-2	S-4	G-4				B-3	B-3	B-3	B-3			
Ch12	S-2	I-4	B-4	I-2	I-4	B-4				A-3	I-3	A-3	I-3			
Ch13	I-2	H-5	R-5	H-3	H-4	R-5				R-4	R-4	R-4	R-4			
and so on up to:																
Total	67	60	60	21	15	15	9	3	3	80	80	20	20	4	4	

5. Further Information

Please refer to the Chroma-Q Color Block PSU-05B manual for more detailed information. A copy of the manual can be found at the Chroma-Q website – www.chroma-q.com – under Support.